

ECOTRAVERS®

INSTALLATION GUIDE

Decorative Wall Slatted Panels

lamel.la



Table of contents:

| | |
|-------------------------------------------------|----------|
| Safety Measures | 2 |
| List of tools required for installation: | 2 |
| Installation methods | 3 |
| 1. Gluing directly to the wall | 3 |
| 2. Screwing to the wall with clips and screws | 3 |

Safety Measures

Installation should be carried out by specialised construction companies. Ecotravers cannot be held liable for damage or injury to the product resulting from faulty installation. Installation not in accordance with the instructions below will deprive the consumer of the right to warranty.

For cutting Ecotravers components, we recommend using a metal/aluminum circular saw with a fine tothing or diamond finish.

List of tools required for installation:

- Angle or table saw - preferably with a fine-toothed metal/aluminium blade or diamond finish
- Level
- Pencil
- Measuring tape
- Mounting glue or clips with screws
- screwdriver (in case of installation with clips)

Installation methods

Before installation, measure the installation space carefully and cut the panels as required. The panels are cut using a fine-toothed saw (circular saw).

There are two different methods of installing interior decorative slatted panels:

1. Gluing directly to the wall:

First check that your walls are dry, flat and even and free of dirt and grease. If necessary, level the wall surfaces and remove any protruding elements, such as wallpaper or loose paint, that could interfere with the correct bonding of the adhesive.


Use a universal mounting adhesive to mount the panels. Apply the adhesive directly to the back of the panel. Press the panel against the walls according to the instructions supplied with the chosen adhesive. The slats have a tongue and groove. Install each consecutive board by inserting the tongue into the groove and gluing.

2. Screwing to the wall with clips and screws:

The panels can be screwed directly to the substrate using dedicated clips and screws.



The slats have a tongue and groove.

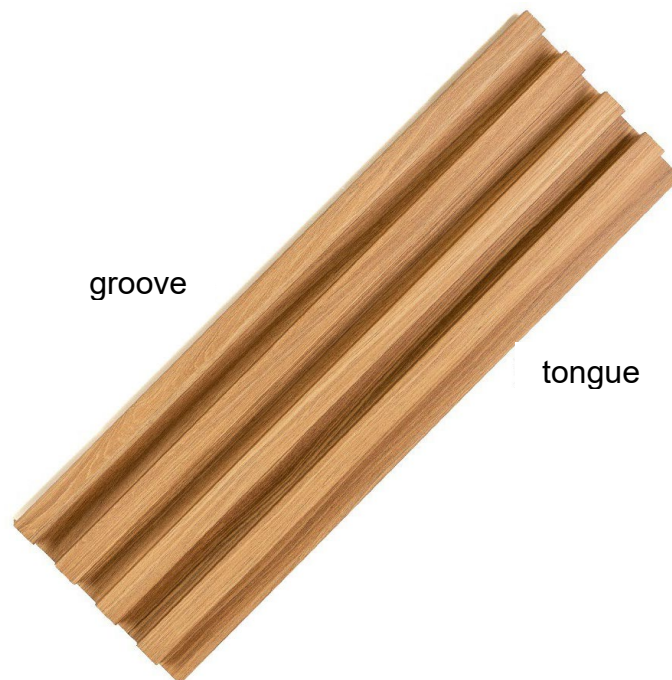

Place the clips evenly (approx. every 50 cm) on the protruding part on the groove side. Screw it to the wall. Then insert another board into the groove (tongue side) and mount it with the clips. Repeat the process with the consecutive boards.

